


1 Install CD-RW Driver for your Mac

(1) Put Driver CD into the CD-ROM of Mac

(2) Copy the file from Driver CD\CD-RW_Driver\MACosx_V1.2 \CYMSC_MACOSX_1_4J.pkg.hqx on the table of Mac.

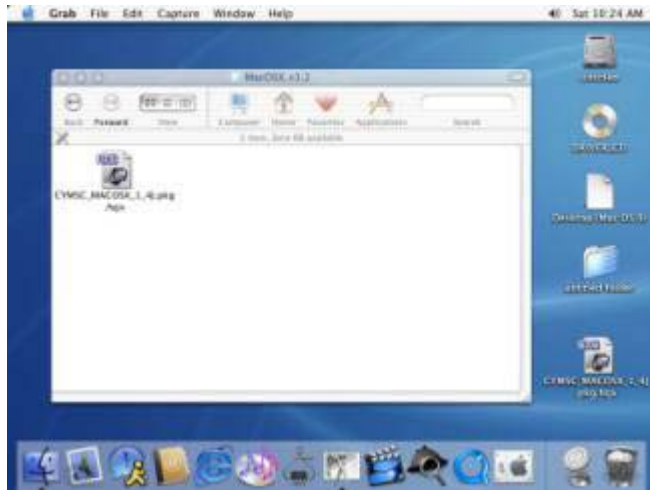

(3) Double click the file CYMSC_MACOSXM1M4J.pkg.hqx on the table of Mac.

It will add two icons. Cypress USB Storage 1.4j.pkg and Cypress USB Storage 1.4J.p...sit.



(4) Double click the file Cypress USB Storage 1.4J.pkg then into the install process.

Please install requires that your pass phrase, and click OK.



(5) Welcome to the Cypress USB Storage Driver 1.4, Click Continue.




(6) Important information, Click Continue.




(7) Select a Destination, Click Continue



(8) Show Easy Install, Click Upgrade.

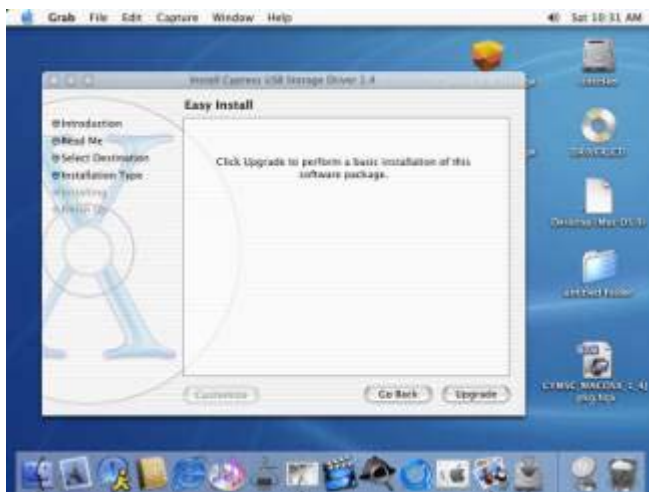

(9) Click Continue Installation.

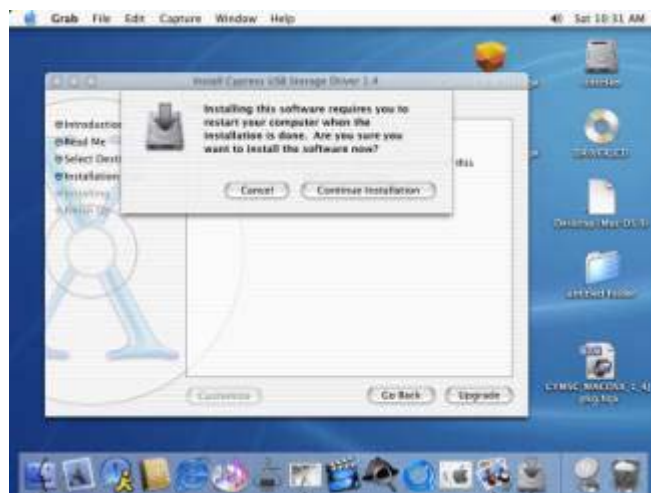

(10) The software was successfully installed, Click Restart.



Mac OS X Series can support to use Card Reader and CD-RW at the same time.



There will be a warning message *You cannot burn this disc in the Finder because the disc drive is not supported.* pops up when you inserted a blank CD-R and plugged in the USB cable to your Mac.



[What to do ?]

Please **ignore** this message and continue to burn your CD via famous burning program like Toast 5.2.

[Explanation]

This is just a warning message to indicate that this Mac OS X version cannot allow you to directly apply this CD-RW in Finder environment. Using program like Toast 5.2 can burn disc without problem.

2 Install Card Reader driver for your Mac

1. Our Product supply Mac 10.1.2 or later that haven't install any driver.
2. If your system are Mac 10.1.2 before, please go to Mac website to update your version.
3. Before you use, please insert the flash memory card into the proper slot and change the device to the external mode.

Then plug in the USB cable to 6in1 port. Mac OSX will auto detect the external device.

